

ÜBERSICHTSZEICHNUNG ASSEMBLY DRAWING

GHOSH

LECTOR FS SF ESSENTIAL



LECTOR FS SF ADVANCED



LECTOR FS SF PRO



LECTOR FS SF WORLD CUP 30



LECTOR FS SF (MY24)

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING

Spare Part Kits:

GHOST


➤ Axle and screw kit	KE0311	<u>Page 7</u>
➤ Rear shock screw kit	KE0312	<u>Page 8</u>
➤ Bearing kit	KE0313	<u>Page 9</u>
➤ Cable inlet kit	KE0366	<u>Page 10</u>
➤ Protector kit	KE0367	<u>Page 11</u>
➤ Brakemount kit	KE0368	<u>Page 12</u>

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING

main frame

GHOST

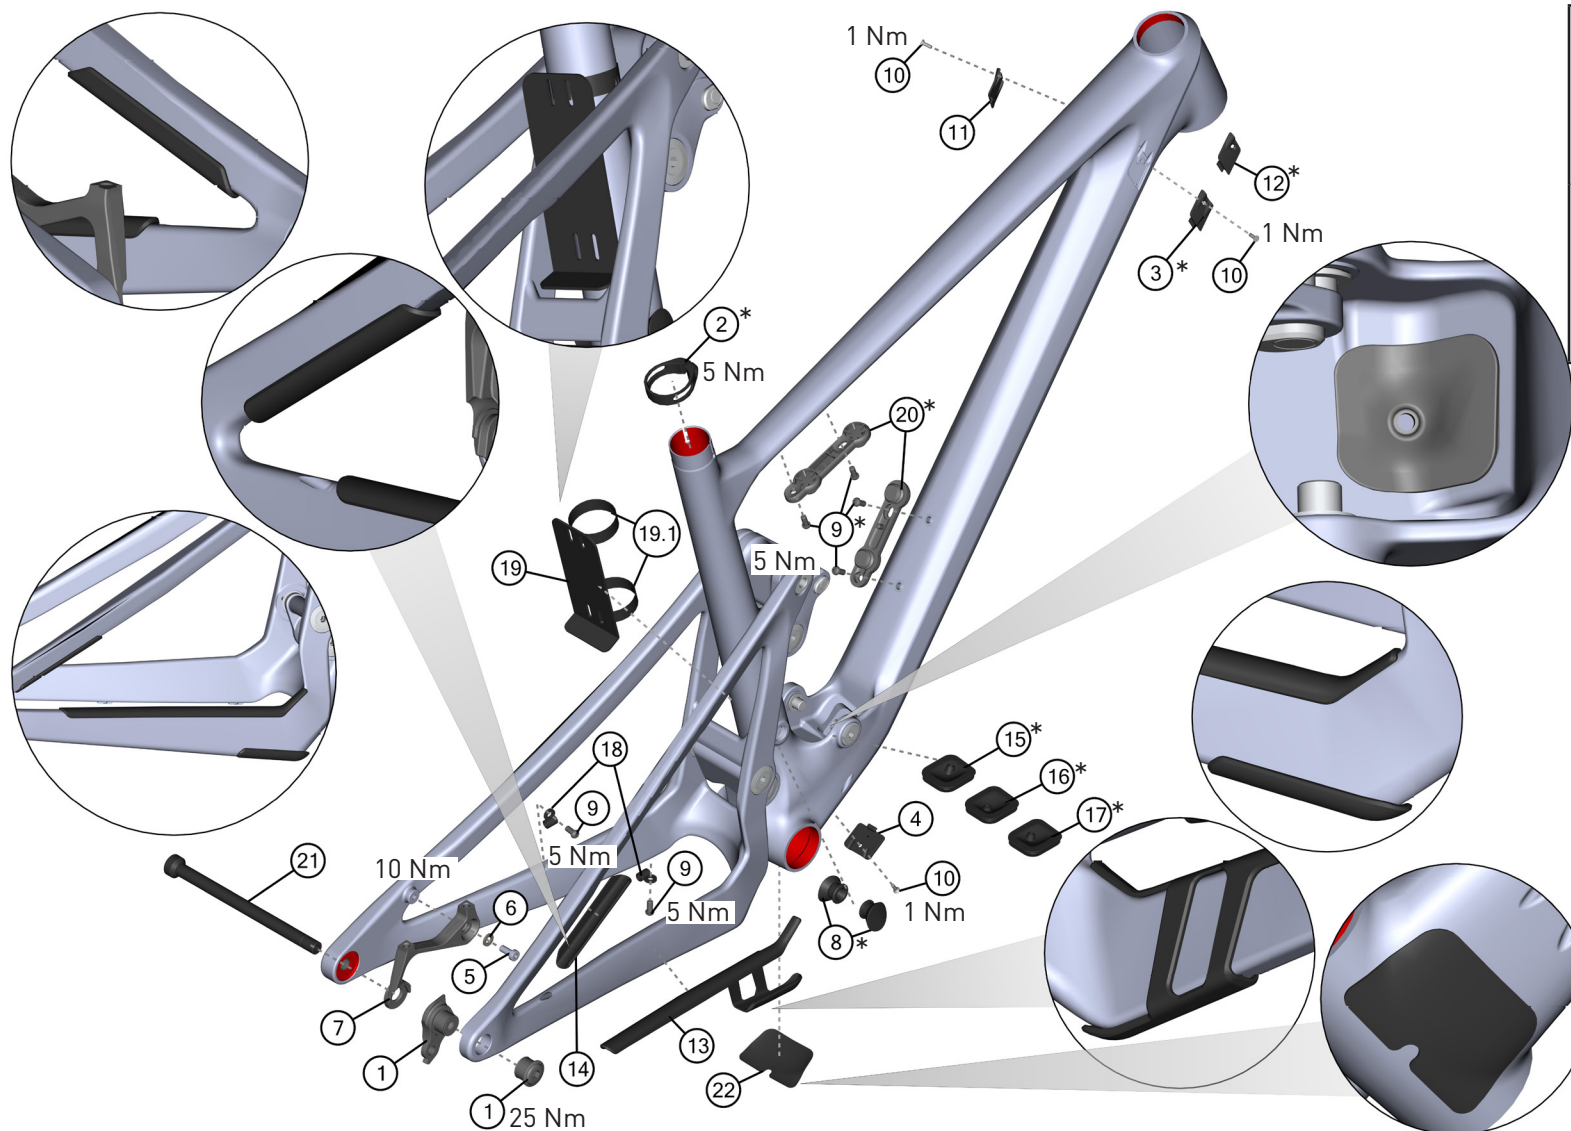

Hinweis: Bei den Schrauben muss mittelfeste Gewindesicherung verwendet werden. Rote Flächen müssen gefettet werden.

Note: use medium strength screw lock for screw threads. red surfaces has to be greased.

Pos. 22 BB Protector



ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING main frame

GHOST


BOM-ID	Item nr.	QTY	Description	Specification	Torque
1	FRHG0061	1x	UDH derailleur hanger + nut	Don't grease the thread!	25 Nm
2*	SC0009	1x	GW Seatclamp (without EightPins)	Style A 38,0 mm black	5 Nm
3*	FR0T0192	1x	Cable routing HT - right side (2 cable)		
4	FR0T0197	1x	Cable routing BB (2 cable)		
5	SM1693	1x	Hexagon socket screw	Hex 4 - M6 x 14 mm	10 Nm
6	SM1243	1x	Washer	ø 6,4 mm	
7	FR0T0202	1x	Disconnect brakemount PM 180mm		
8*	FR0T0173	1x	PP Rubber Plug, left side without thread into frame	(without EightPins)	
8*	FR0T0226	1x	PP Rubber Plug, right side with thread into frame	(without EightPins)	
9*	SM0919	4x	Lens head screw, Framesize XS	TX25 - M5 x 12 mm	5 Nm
9*	SM0919	6x	Lens head screw, Framesize S - XL	TX25 - M5 x 12 mm	5 Nm
10	SM1524	3x	Counter sunk screw	TX10 - M3 x 10 mm	1 Nm
11	FR0T0195	1x	Cable routing HT - left side (2 cable)		
12*	FR0T0193	1x	Cable routing HT - right side (1 cable)		
13	FRPR0067	1x	Protector chain stay		
14	FRPR0068	1x	Protector seat stay		
15*	FR0T0201	1x	Cable guide - shock DT Swiss		
16*	FR0T0200	1x	Cable guide - shock Rock Shox		
17*	FR0T0199	1x	Cable guide - shock Fox		
18	SM0002	2x	Cable guide		
19	FER0029	1x	VPP fender rear triangle		
19.1	PM0025	2x	Klett-Kabelband	330 x 20 mm	
20*	FR0T0203	1x	FIDLOCK TWIST bike base, Framesize XS		
20*	FR0T0203	2x	FIDLOCK TWIST bike base, Framesize S - XL		
21	WAX0019	1x	Thru axle	L169mm - 148mm x M12 x P1.0 x 15mm (SYN X-12)	
22	53101513	1x	BB protector		

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING

rocker

GHOST

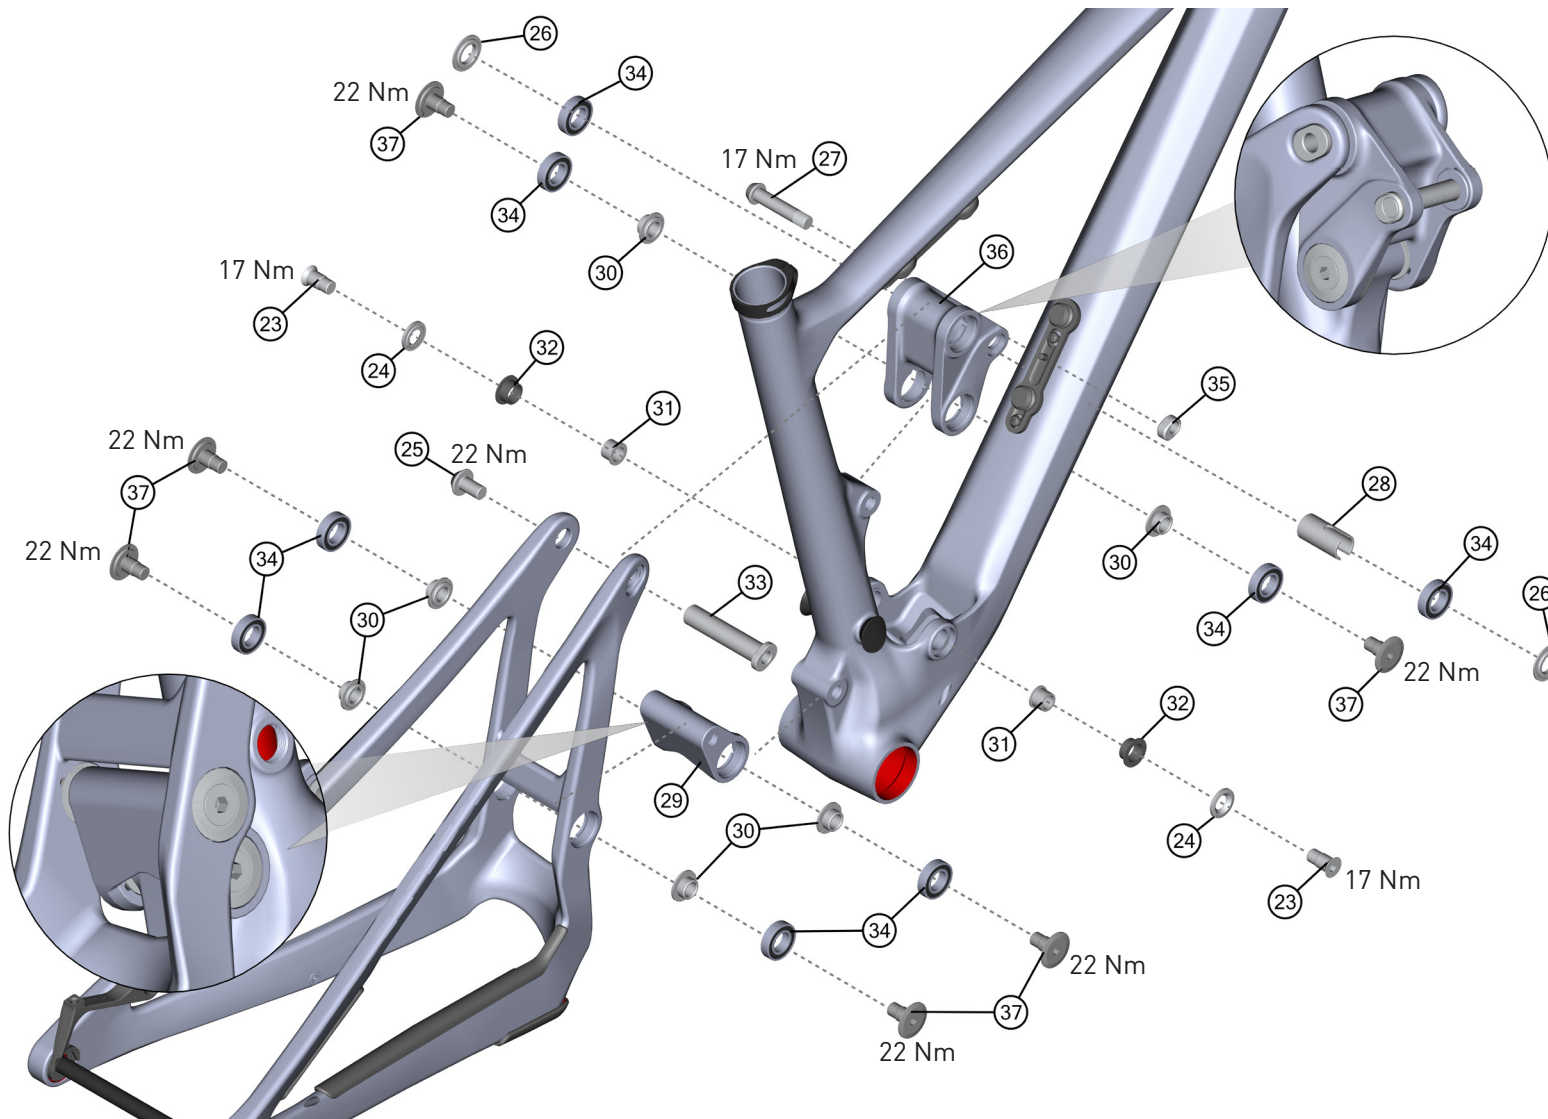

Hinweis: Bei den Schrauben muss mittelfeste Gewindesicherung verwendet werden.
Rote Flächen müssen gefettet werden.

Note: use medium strength screw lock for screw threads.
red surfaces has to be greased.

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING

rocker

GHOST

BOM-ID	Item nr.	QTY	Description	Specification	Torque
23	FRSC0105	2x	Flat head screw (for shock)	Hex 6 - M10 x 21,7 mm	17 Nm
24	FRWS0046	2x	Cap for trunnion mount	ø 11 x Ø 22 x 3 mm	
25	FRSC0159	1x	Rocker mount screw	Hex 6 - M10 x 17 mm	22 Nm
26	FRWS0041	2x	Spacer for rocker mount	ø 15 x Ø 22 x 4,8 mm	
27	FRSC0103	1x	Shock mount screw	Hex 6 - M10 x 49 mm	17 Nm
28	FRSP0003	1x	Sleeve for rocker	ø 15,2 x Ø 19 x 37,6 mm	
29	FRSC0108	1x	VPP link		
30	FRSP0001	6x	Spacer for bearing seat	ø 11 x Ø 15 x 10 mm	
31	FRSP0004	2x	Sleeve for trunnion mount	ø11 x Ø 14 x 10,5 mm	
32	FROT0190	2x	Bushing for trunnion mount	ø 14 x Ø 16 x 8 mm	
33	FRAX0009	1x	Axle Rocker mount	M10 - Ø 15 x 74,5 mm	
34	FRBR0001	8x	Bearing 61902	ø15 x Ø 28 x 7 mm	
35	FRNT0057	1x	Nut for shock mount	M10	
36	FRR00003	1x	Rocker		
37	FRSC0024	6x	Flat head screw incl. cap Not to be used for mounting the shock!	Hex 6 - M10 x 21,7 mm	22 Nm


ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING axle & screw kit

GHOST

BOM-ID	Item nr.	QTY	Description	Specification	Torque
	KE0311	1x	Axle an screw Kit		
25	FRSC0159	1x	Rocker mount screw	Hex 6 - M10 x 17 mm	22 Nm
33	FRAX0009	1x	Axle Rocker mount	M10 - Ø 15 x 74,5 mm	
37	FRSC0024	6x	Flat head screw incl. cap	Hex 6 - M10 x 21,7 mm	22 Nm

Item no. axle and screw kit: **KE0311**

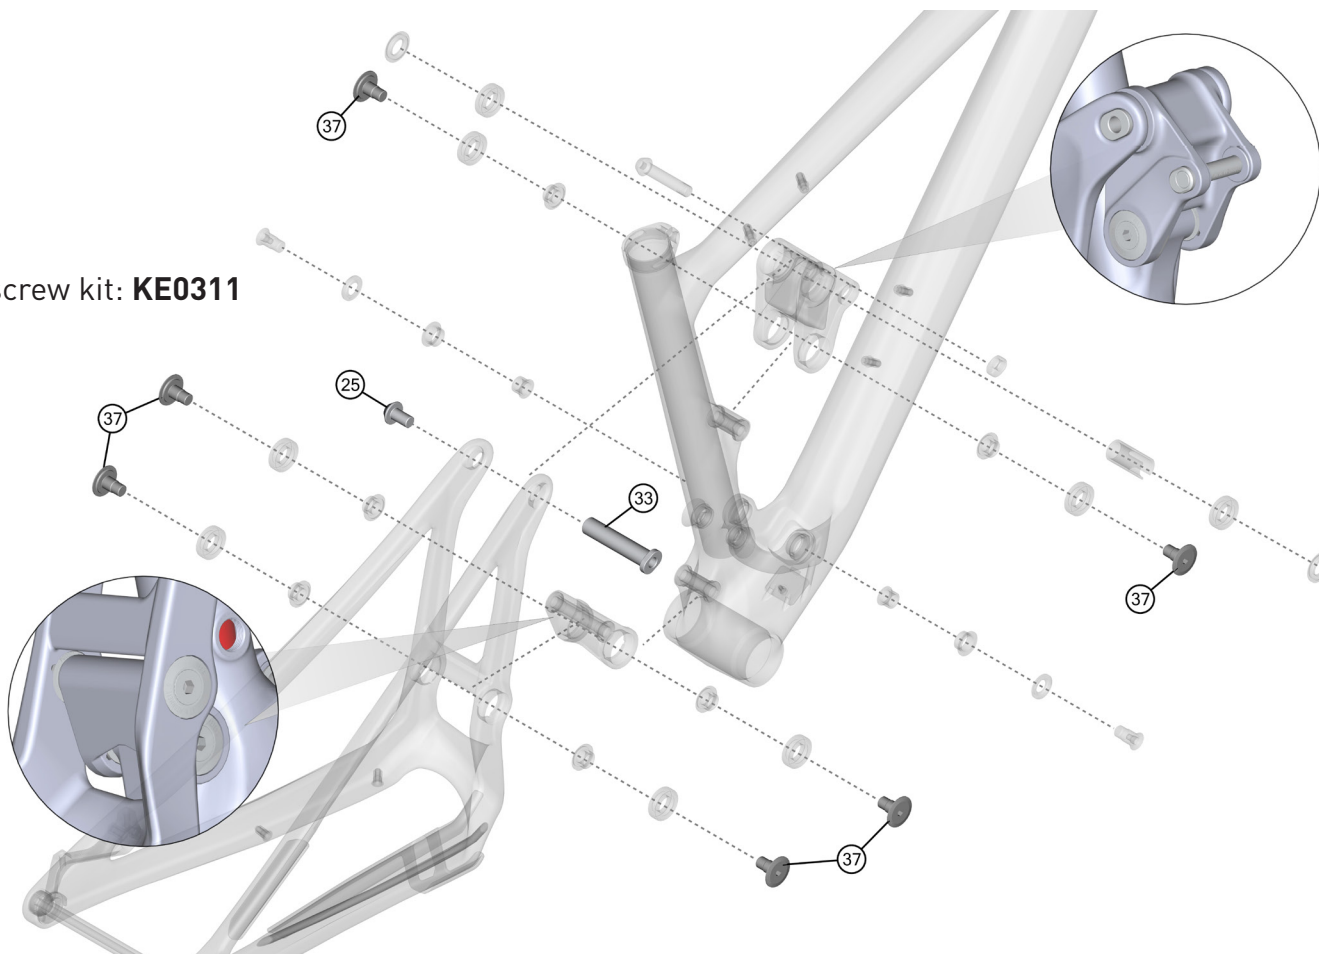


ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING rear shock screw kit

GHOST

BOM-ID	Item nr.	QTY	Description	Specification	Torque
	KE0312	1x	Rear shock screw Kit		
23	FRSC0105	2x	Flat head screw	Hex 6 - M10 x 21,7 mm	17 Nm
24	FRWS0046	2x	Cap for trunnion mount	ø 11 x Ø 22 x 3 mm	
27	FRSC0103	1x	Shock mount screw	Hex 6 - M10 x 49 mm	17 Nm
35	FRNT0057	1x	Nut for shock mount	M10	

Item no. rear shock screw kit: **KE0312**

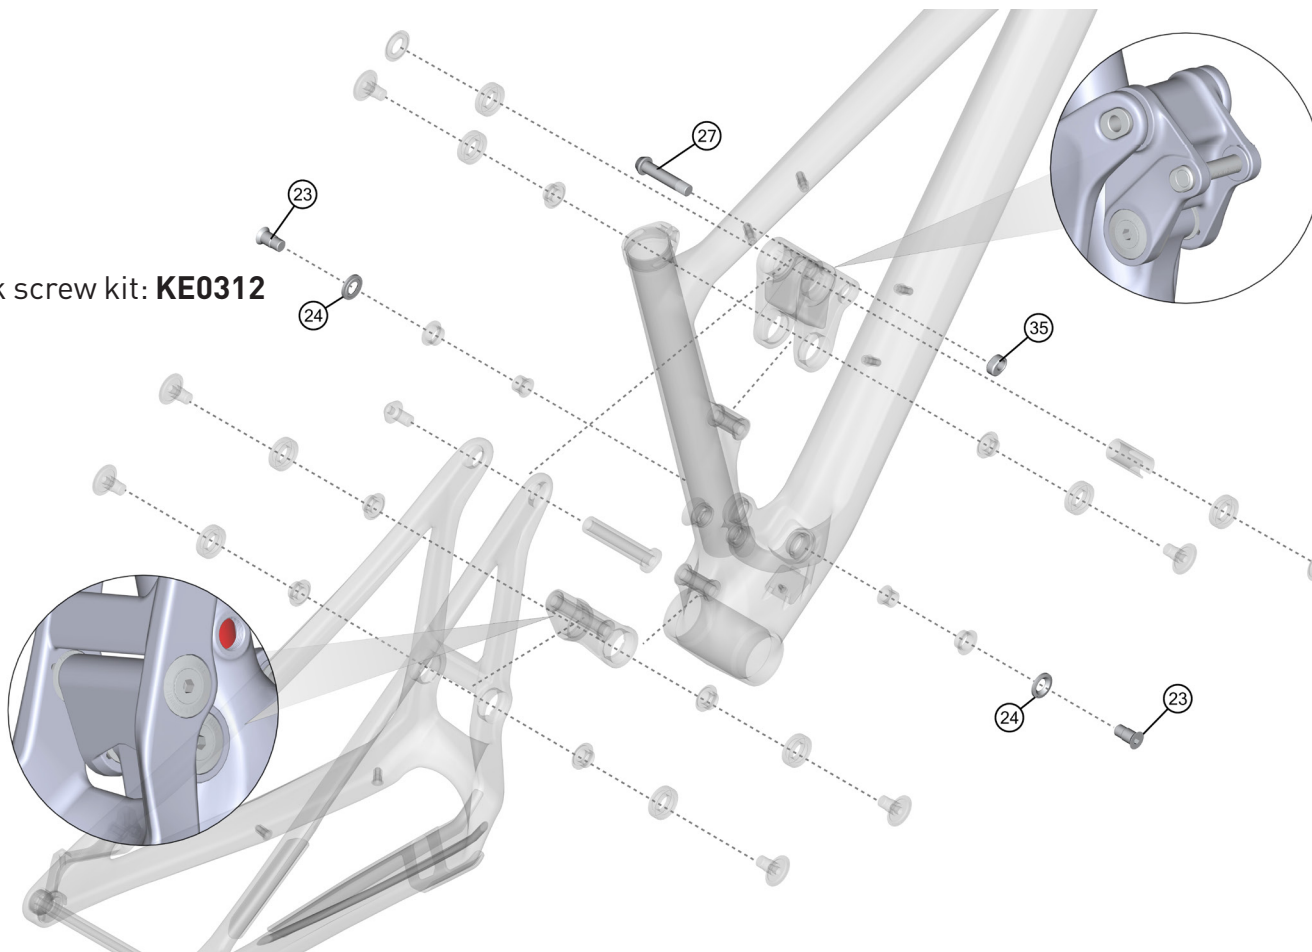


ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING bearing kit

GHOST

BOM-ID	Item nr.	QTY	Description	Specification	Torque
	KE0313	1x	Bearing Kit		
26	FRWS0041	2x	Spacer for rocker mount	ø 15 x Ø 22 x 4,8 mm	
28	FRSP0003	1x	Sleeve for rocker	ø 15,2 x Ø 19 x 37,6 mm	
30	FRSP0001	6x	Spacer for bearing seat	ø 11 x Ø 15 x 10 mm	
31	FRSP0004	2x	Sleeve for trunnion mount	ø11 x Ø 14 x 10,5 mm	
32	FROT0190	2x	Bushing for trunnion mount	ø 14 x Ø 16 x 8 mm	
34	FRBR0001	8x	Bearing 61902	ø15 x Ø 28 x 7 mm	

Item no. bearing kit: **KE0313**

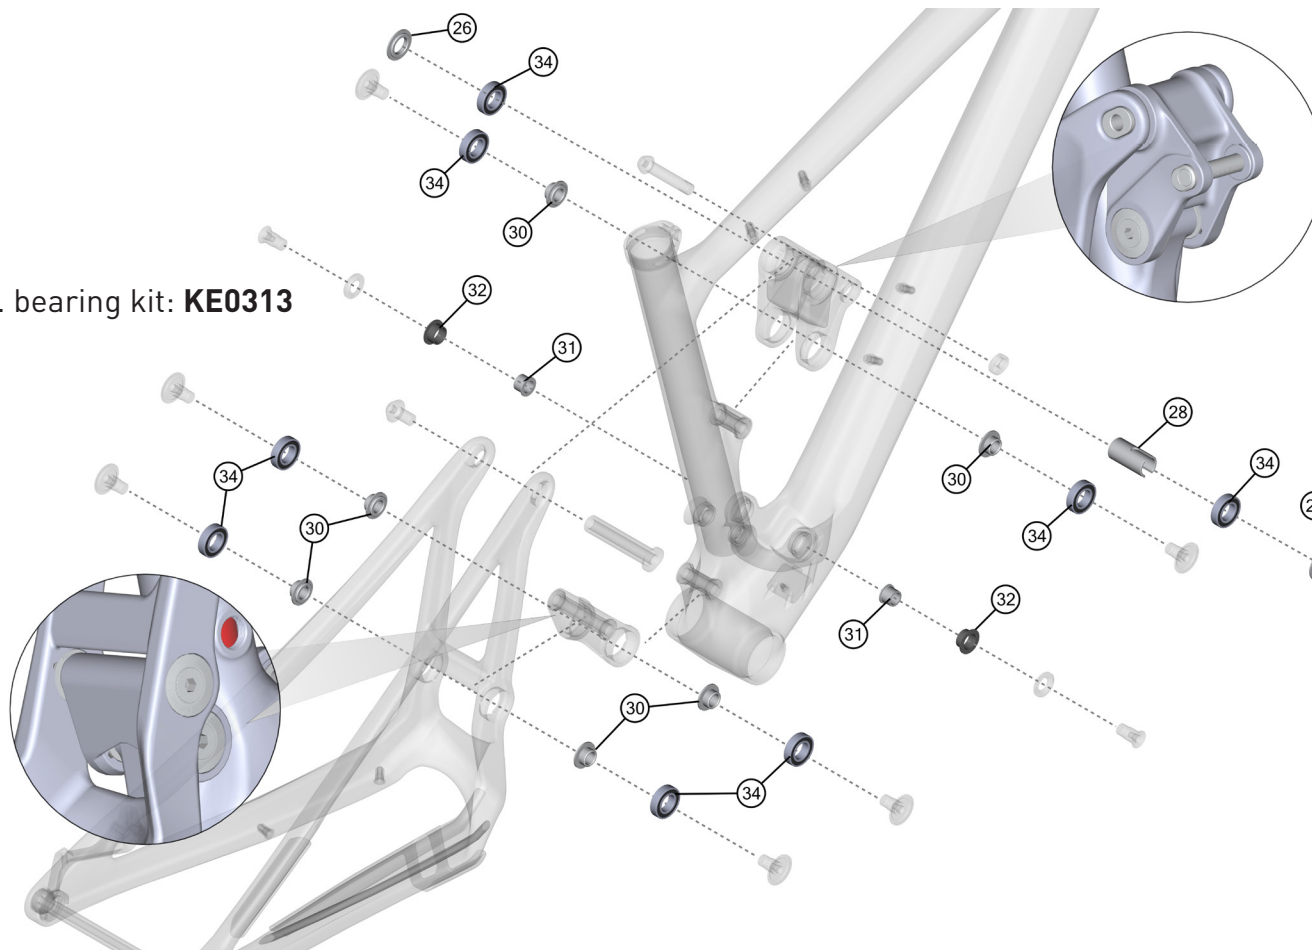


ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING cable inlet kit

GHOST

BOM-ID	Item nr.	QTY	Description	Specification	Torque
	KE0366	1x	Cable inlet Kit		
3	FROT0192	1x	Cable routing HT - right side (2 cable)		
4	FROT0197	1x	Cable routing BB (2 cable)		
10	SM1524	3x	Counter sunk screw	TX10 - M3 x 10 mm	1 Nm
11	FROT0195	1x	Cable routing HT - left side (2 cable)		
12	FROT0193	1x	Cable routing HT - right side (1 cable)		
15	FROT0201	1x	Cable guide - shock DT Swiss		
16	FROT0200	1x	Cable guide - shock Rock Shox		
17	FROT0199	1x	Cable guide - shock Fox		

Item no. cable inlet kit: **KE0366**

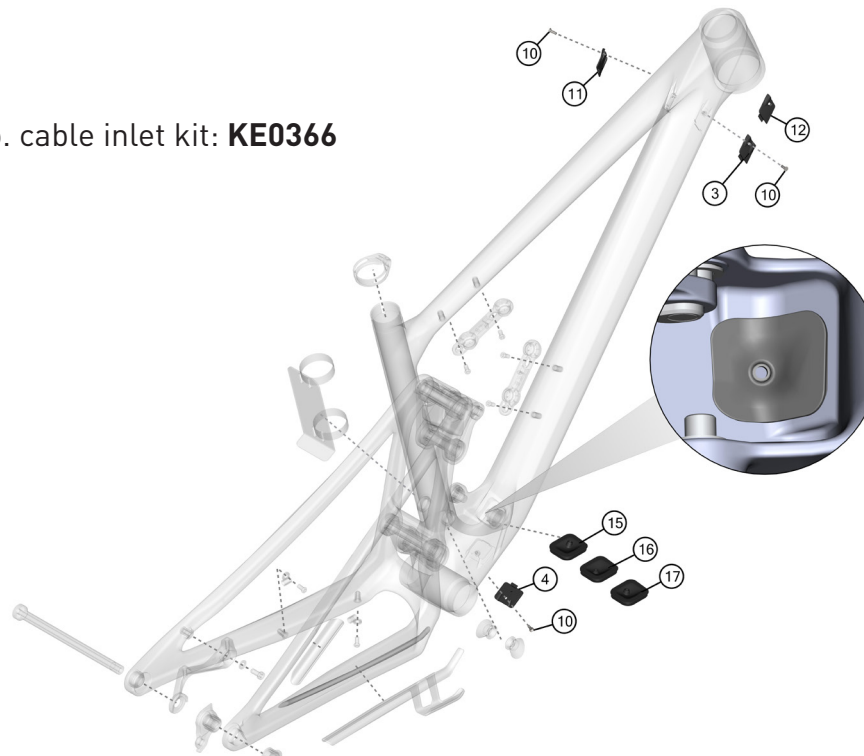


ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING protector kit

GHOST

BOM-ID	Item nr.	QTY	Description	Specification	Torque
	KE0367	1x	Protector Kit		
8	FROT0173	1x	PP Rubber Plug, left side without thread into frame (without EightPins)		
8	FROT0226	1x	PP Rubber Plug, right side with thread into frame (without EightPins)		
13	FRPR0067	1x	Protector chain stay		
14	FRPR0068	1x	Protector seat stay		
19	FER0029	1x	VPP fender rear triangle		
19.1	PM0025	2x	Klett-Kabelband	330 x 20 mm	

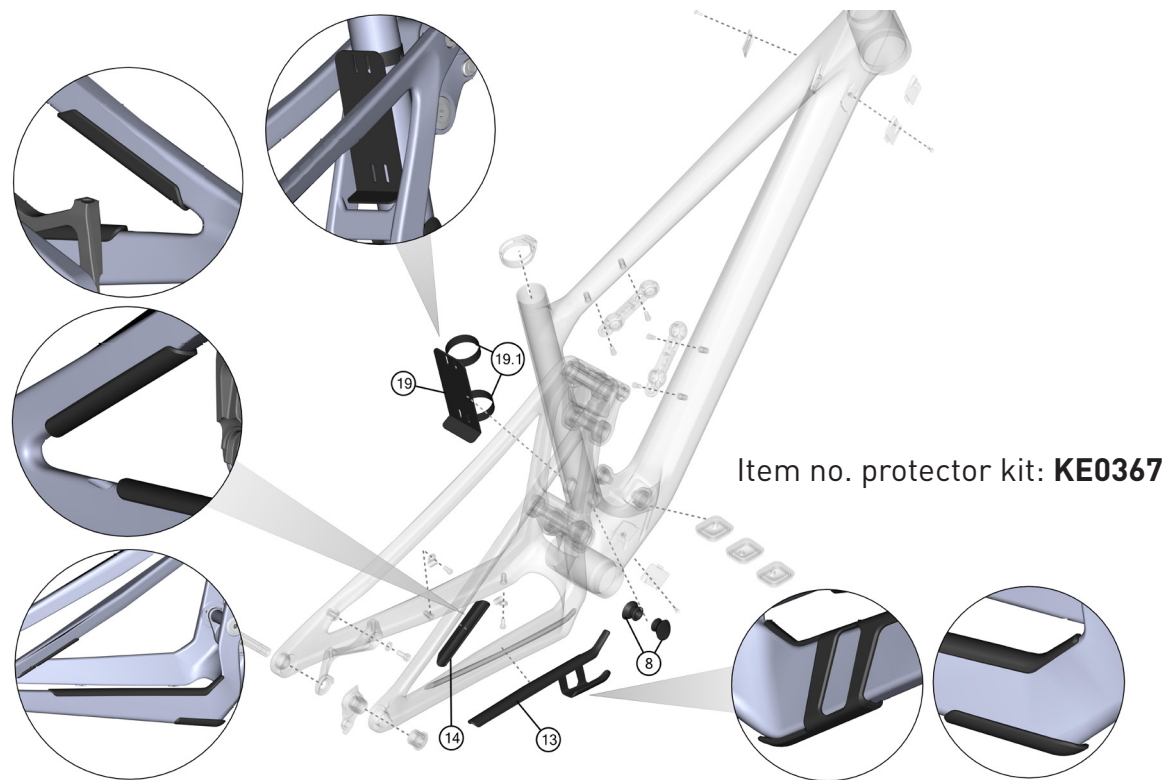


ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING brakemount kit

GHOST

BOM-ID	Item nr.	QTY	Description	Specification	Torque
	KE0368	1x	Brakemount Kit		
5	SM1693	1x	Hexagon socket screw	Hex 4 - M6 x 14 mm	10 Nm
6	SM1243	1x	Washer	ø 6,4 mm	
7	FR0T0202	1x	Disconnect brakemount PM 180mm		
9	SM0919	2x	Lens head screw	TX25 - M5 x 12 mm	5 Nm
18	SM0002	2x	Cable guide		

Item no. brakemount kit: **KE0368**

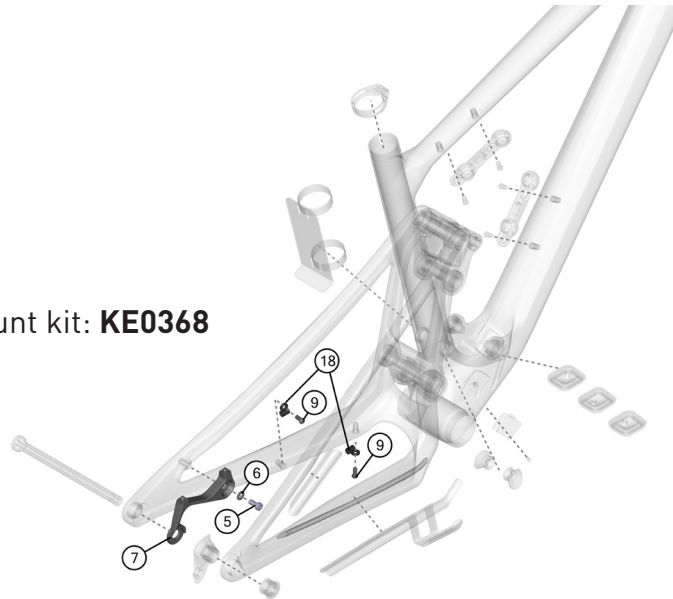

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING

GHOST

FACT SHEET:	
SHOCK LENGTH:	165 MM
SHOCK HARDWARE TOP:	30x10
SHOCK HARDWARE BOTTOM:	54xTR
HEADSET TOP:	ZS 44
HEADSET BOTTOM:	ZS 56
SEATPOST DIAMETER:	34,9 MM
CLAMP INNER DIAMETER:	38,0 MM
BOTTOM BRACKET:	Pressfit 92 / DUB
KICKSTAND:	-----
ISCG STANDARD:	-----
CARRIER MOUNT:	-----
FENDER COMPATIBLE:	-----

DROPPER SEATPOST READY:	Yes
WATERBOTTLE MOUNT:	Size XS / S: 1 x 0,5 L + 1 x 0,75 L Size M / L / XL: 2 x 0,75 L
MAXIMUM PERMISSIBLE TOTAL WEIGHT:	120 KG
MAXIMUM TIRE SIZE:	29" x 2.35"
WHEEL SIZE:	29"
QUICK RELEASE LENGTH:	169 MM
OVER-LOCKNUT DIMENSION (O.L.D.):	148 MM
FD CLAMP SIZE:	-----
FD TYPE:	-----
ENGINE:	-----
BATTERY:	-----
DISPLAY:	-----