

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING

GHOST



Lector WC.9, 10.9, 9.9 (MY18)

V01

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING


GHOST

Hinweis:

Bei den Schrauben muss mittelfeste Gewindesicherung verwendet werden.
Rote Flächen müssen gefettet werden.

note:

use medium strength screw lock for screw threads.
red surfaces have to be greased.

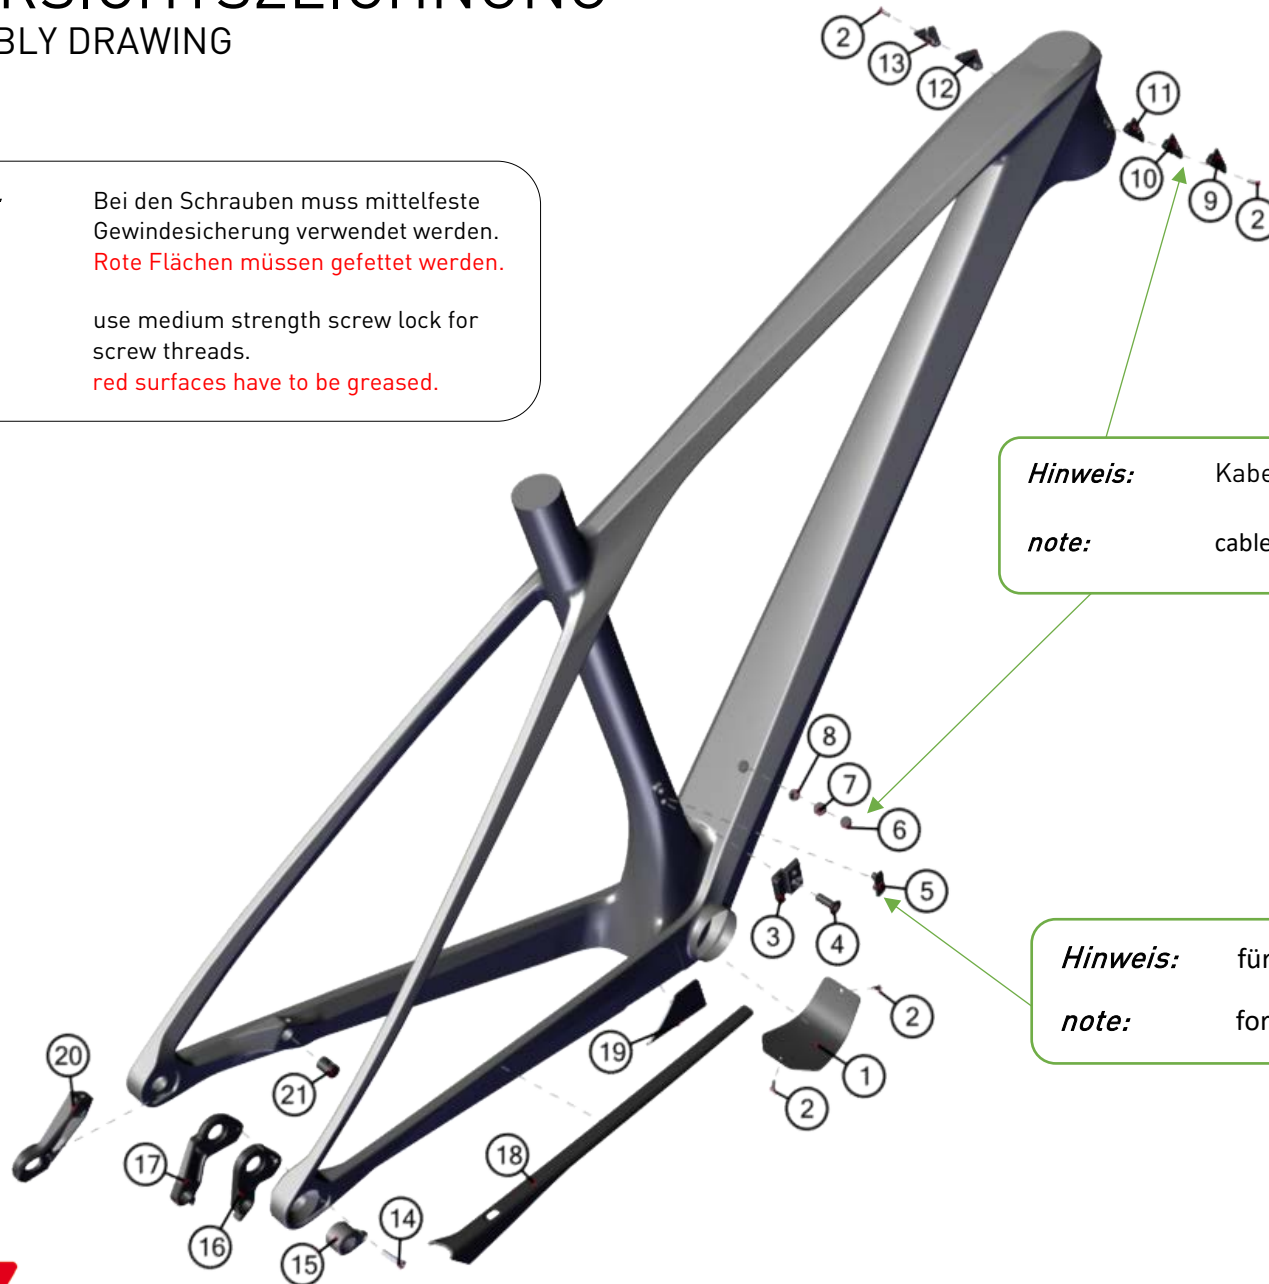

Hinweis: Kabelführungen modellabhängig
note: cableguides depends by model

Hinweis: für Modelle ohne Umwerfer
note: for models without front derailleur

ÜBERSICHTSZEICHNUNG

ASSEMBLY DRAWING

GHOST

BOM-ID	Item no.	Specification	Torque	Description	QTY
1	SM1406			BB protection	1
2	SM1524	T10 – M3 x 10mm	0,5 Nm	Flat Head Screw M3	4
3	SM1500			FD Dir. Mount	1
4	SM1374	T30 – M6 x 12mm	6 Nm	Flat Head Screw	1
5	SM1396			FD cap	1
6	SM1397			DT cap closed	1
7	SM1510			FD cap, DI2	1
8	SM1388			DT cap Sideswing FD	1
9	SM1504			HT cap right, no hole	1
10	SM1399			HT cap right, 1 hole, dropper	1
11	SM1402			HT cap right, 2 hole, Dropper + FD	1
12	SM1401			HT cap left; RB & RD	1
13	SM1509			HT cap left; RB & RD DI2, plastic	1
14	FRSC0026	HEX3 – M3 x 21mm	0,5 Nm	Cylindrical low head screw	1
15	FRNT0025			Hanger Mount	1
16	FRHG0021			Hanger SRAM (B2)	1
17	FRHG0022			Hanger Shimano (B1)	1
18	SM1502			cs protection	1
19	SM1407			chain protection	1
20	SM1506			Disconnect brake mount	1
21	SM1507			Disconnect brake mount nut	1